



Roll Up Piano USER MANUAL

61 KEY

software for piano download from:
<http://kohoxo.com/en-piano.zip>

Thank you sincerely for buying our hand roll piano. We are specialized in developed and manufactured hand roll piano and drum kit for over 15years. This hand roll piano is a handy size product which very easy to carry, in order to have a best experience effect, please pay attention to the operation, wish you enjoy it, thanks again for your cooperation!

Main Feature

- 61 Key (C3-C8) standard piano
- 128 kinds of tone, 128 kinds of rhythms and 45 demo songs
- Digital display
- Master volume control key, rhythm
- Tempo control key
- Mode selection key (tone and rhythm)
- Recording, OOP and playback function
- Single finger chord and multi-finger chord
- Demo songs play
- Drum kit
- Start/top insert function key
- Sustain and vibrato function
- Single key teaching function
- USB charging (#2)
- Audio input function
- Earphone/speaker output interface
- Higher black key than white key
- Power-saving function, and it will power off automatically once no operation for 3 minutes
- by built in 1100mA li-ion battery (#2)
- 4 *AAA batteries power supply (#1)

Icons specification of panel function

#1

#2

1. pressing it first time it will start to play songs and pressing it second time the play will be stopped.

• It will automatically enter into demo selection mode under playing request mode, and it will return to tone selection mode once exit from playing request mode.

• when playing demo songs, pressing tone selection key will make it temporarily switch into tone selection mode, and will return to demo song mode after selection for 3 seconds.

4. Rhythm

1) Start/stop

- To exit from these mode such as teaching, recording, playback, programming, play, demo song, metronome and other mode.
- To press **[H]** first time will play rhythm, and to press **[H]** second time will stop rhythm.

2) Insert

- **[Insert]** has function only under rhythm mode.
- When rhythm is playing, press **[Insert]** to add the door function for rhythm. When finish playing this section rhythm, it will insert a door interlude.

5. Chord accompaniment

1) Single finger chord

- **[Single]** has function only under rhythm mode and general mode.
- Under rhythm play mode, press this key and any key in the range of C3-F4#, then press single fingering you will hear the relevant chord accompaniment.
- This fingering can be used together with rhythm.

2) Multi-finger chord

- **[Multi]** has function only under rhythm mode and general mode.
- While playing rhythm, press this key and any key in the range of C3-F4#, then press finger, you will hear the relevant chord accompaniment. if not pressing finger, it will not play chord rhythm.
- This fingering can be used together with rhythm.

6. Recording and oop

1) Recording

- Pressing **[REC]** will make it enter into recording mode, and then press any key or turn key, it will start to record. The maximum record is 92, once it is full, you will cannot continue to record next musical note. You can press **[P]** at any moment to play record while recording.
- Every time pressing **[REC]** will delete the memory last time and again enter into recording mode.

2) OOP

- Pressing **[OOP]** will make it enter into OOP mode, and the default speed is 120.
- Can record the drum sound pressed, and under OOP mode, it can record drum sound and keyboard drum (piano key will automatically switch into keyboard drum).
- The most record is 32, and once it is full, it will cannot continue to record next drum sound. You can press **[P]** at any moment to play drum sound recorded.
- Every time pressing **[OOP]** will delete the memory last time and again enter into OOP mode.

3) Playback

- Play program: can play all drum sound and repeat play.
- Play record: can play the musical note and drum sound recorded at the selected tone while recording. Now keyboard and panel drum are invalid.
- Pressing **[P]** will have no act if there is no previous record value.

7. Effect change

1) Tone change :

- Sustain: press **[Sustain]** to extend the end time of piano key sound.
- Vibrato: press **[Vibrato]** to make piano key sound has trebling effect.

8. Teaching mode

1) Teaching (OKON) :

- Pressing **[OKON]** will make it enter into teaching mode, then press white key to select different songs, and after playing song, whichever key user press, it will be the main melody. If the main melody has not run up to the next section, the background sound will repeatedly play this section till the section is over.

9. Software for piano download from: <http://kohoxo.com/en-piano.zip>

IV Accessory one: lists of tone

Tone Number	Name	Tone Number	Name
T00	Acoustic Grand Piano	T30	Distortion Guitar
T01	Bright Acoustic Piano	T31	Guitar Harmonies
T02	Electric Grand Piano	T32	Acoustic Basses
T03	Honky-tonk Piano	T33	Electric Bass(finger)
T04	Rhodes Piano	T34	Electric Bass (pick)
T05	Chorused Piano	T35	Fretless Bass
T06	Harpichord	T36	Slap Bass 1
T07	Clavichord	T37	Slap Bass 2
T08	Celesta	T38	Synth Bass 1
T09	Glockenspiel	T39	Synth Bass 2
T10	Music box	T40	Violin
T11	Vibraphone	T41	Viola
T12	Marimba	T42	Cello
T13	Xylophone	T43	Contrabass
T14	Tubular Bell	T44	Tremolo Strings
T15	Dulcimer	T45	Pizzicato Strings
T16	Drawbar Organ	T46	Orchestral Harp
T17	Percussive Organ	T47	Timpani
T18	Rock Organ	T48	String Ensemble 1
T19	Church Organ	T49	String Ensemble 2
T20	Reed Organ	T50	Synthetic Drum
T21	Accordion	T51	Synthetic Strings 2
T22	Harmonica	T52	Choir Aahs
T23	Tango Accordion	T53	Voice Oohs
T24	Acoustic Guitar (nylon)	T54	Synth Voice
T25	Acoustic Guitar (steel)	T55	Orchestra Hit
T26	Electric Guitar (jazz)	T56	Trumpet
T27	Electric Guitar (clean)	T57	Trombone
T28	Electric Guitar (muted)	T58	Tuba
T29	Overdriven Guitar	T59	Muted Trumpet

Tone Number	Name	Tone Number	Name
T60	French Horn	T94	Pad 7 (halo)
T61	Brass Section	T95	Pad 8 (sweep)
T62	Synth Brass 1	T96	FX 1 (rain)
T63	Synth Brass 2	T97	FX 2 (soundtrack)
T64	Soprano Sax	T98	FX 3 (crystal)
T65	Alto Sax	T99	FX 4 (atmosphere)
T66	Tenor Sax	T100	FX 5 (pynghness)
T67	Baritone Sax	T101	FX 6 (goblins)
T68	Oboe	T102	FX 7 (echoes)
T69	English Horn	T103	FX 8 (sci-fi)
T70	Bassoon	T104	Sitar
T71	Clarinet	T105	Banjo
T72	Piccolo	T106	Shamisen
T73	Flute	T107	Koto
T74	Recorder	T108	Kalimba
T75	Pan Flute	T109	Bagpipe
T76	Bottle Blow	T110	Fiddle
T77	Shakuhachi	T111	Shanai
T78	Whistle	T112	Tinkle Bell
T79	Ocarina	T113	Agogo
T80	Lead 1 (square)	T114	Steel Drums
T81	Lead 2 (sawtooth)	T115	Woodblock
T82	Lead 3 (calliope lead)	T116	Taiko Drum
T83	Lead 4 (chiff lead)	T117	Melodic Tom
T84	Lead 5 (charang)	T118	Synth Drum
T85	Lead 6 (voice)	T119	Reverse Cymbal
T86	Lead 7 (fifths)	T120	Guitar Fret Noise
T87	Lead 8 (bass+lead)	T121	Breath Noise
T88	Pad 1 (new age)	T122	Seashore
T89	Pad 2 (warm)	T123	Bird Tweet
T90	Pad 3 (polysynth)	T124	Telephone Ring
T91	Pad 4 (choir)	T125	Helicopter
T92	Pad 5 (bowed)	T126	Applause
T93	Pad 6 (metallic)	T127	Gunshot

V Accessory two: lists of rhythm

Rhythm Number	Name	Style	Rhythm Number	Name	Style
R00	Straight Rock		R32	Blue Grass 2	
R01	Rock		R33	Blue Grass 3	
R02	Fast Gospel		R34	Pop Waltz	
R03	Folk Rock		R35	USA March	
R04	Rock Billy		R36	Hully Gully	March
R05	Rock Boogie	Rock	R37	Tarantella	
R06	Rock Cha Cha		R38	Limbo Rock	
R07	Rock Classical		R39	Swing Waltz	
R08	Rock Shuffle		R40	Pub Piano	
R09	Rock'n Roll 1		R41	Jazz Waltz 1	
R10	Rock'n Roll 2		R42	Jazz Waltz 2	
R11	Rock Pop		R43	Show Tune	
R12	Club Pop		R44	Polka	
R13	16 Beat Pop		R45	Waltz	
R14	8 Beat Pop		R46	Cha Cha	
R15	8 Beat Soul		R47	Rumba	
R16	8 Beat Soul		R48	Jive	
R17	Rap Pop		R49	Pasodoble	Ballroom
R18	Pop Rock		R50	Samba 1	
R19	60's Soul		R51	Samba 2	
R20	70's Soul	Pop	R52	Schlager Rock 1	
R21	Funk		R53	Schlager Rock 2	
R22	16 Beat Shuffle		R54	Fox Trot	
R23	Twist		R55	Vienness Waltz	
R24	British Pop		R56	Tango 1	
R25	Hard Rock		R57	Tango 2	
R26	Fusion		R58	Bossanova	
R27	Funk Shuffl		R59	Mambo 1	
R28	Fusion Shuffl		R60	Mambo 2	Latin
R29	Ober Polka		R61	Boleto	
R30	Polka Pop	March	R62	Cumbia	
R31	Blue Grass 1		R63	Latin Rock	Country

Rhythm Number	Name	Style	Rhythm Number	Name	Style
R64	Disco Latin		R96	Saturday Night	
R65	Tijana		R97	Club Latin	
R66	Reggae		R98	Disco Chocolate	
R67	Salsa		R99	Disco Fox	
R68	Calypsa	Latin	R100	Disco Funk	
R69	GuadDance		R101	Disco Hands	Dance
R70	Reggae 12 Beat		R102	Disco Party	
R71	Reggae 16 Beat		R103	Disco Samba	
R72	Slow Rock 1		R104	UK Pop	
R73	Slow Rock 2		R105	Club Dance	
R74	Slow Rock 3		R106	Modern R&B	
R75	Slow Soul		R107	Hip Shuffle	
R76	8 Beat Adria		R108	Charleston	
R77	Classic Piano		R109	Disco Pop	
R78	Unplugged		R110	Disco Soul	
R79	Pop Ballad		R111	Disco Trot	
R80	Pop New Age		R112	Euro Beat	
R81	8 Beat Modern	Ballad	R113	Rap	
R82	Country Ballad		R114	Rave	
R83	Love Song		R115	Big Band Shuffle 1	
R84	Modern Country Pop		R116	Big Band Shuffle 2	
R85	Electro Pop		R117	Big Band Shuffle 3	
R86	Acoustic Ballad		R118	Fast Band 1	Swing
R87	Piano Ballad		R119	Fast Band 2	
R88	R&B Ballad		R120	Cat Groove	
R89	Rock Ballad		R121	Dixie Jazz	
R90	Slow & Easy		R122	Medium Jazz	
R91	Analog Ballad		R123	Jazz Big Band	
R92	E Ballad		R124	Jazz Club	
R93	Techno 1		R125	Ragtime	
R94	Techno 2	Dance	R126	Country 1	Country
R95	Funky Disco		R127	Country 2	

VI Accessory three: name lists of demo

Demo Number	name	Demo Number	name
D00	Beer	D23	Totay bibbo
D01	Bulakiak	D24	Ulan
D02	Crazy frog	D25	Mozart Piano Sonata
D03	Hawak kamay	D26	Mozart #40
D04	Kembot	D27	Rhythm Of The Rain
D05	Pameela	D28	For Elise
D06	214	D29	Blue Love
D07	A Doodoo A Daadaa Ahh Ahh	D30	American Patrol
D08	Alpin	D31	Suburban Night Of Moscow
D09	Bye bye na	D32	March
D10	Chaining	D33	Casablanca
D11	Crazy for you	D34	Espano
D12	Doobidoo	D35	Marriage Of Love
D13	First Day Funk	D36	Red River
D14	Hallelujah	D37	Song Of The Seashore
D15	Hari Ng sablay	D38	Theme From Titanic
D16	Itakak mo	D39	Turkish March
D17	Jyuyoy mo	D40	Yesterday Once More
D18	Mang jase	D41	Blue Danube
D19	My humps	D42	Rivers Of Babylon
D20	Ninda	D43	Love Me Tender
D21	Pinoy ako	D44	Top Of The World
D22	Sana		

VII Maintenance of hand-rolling piano

1. Instruction for the use of battery: (#2)

- This piano uses rechargeable lithium battery (1100MA), please check the working position of Charging LED indicator as follow:

Charging state	Red light	Green light
Charging	Light on	Light off
Fully charged	Light off	Light on
Battery misplaced	Light off	Light off
Standby	Light off	Light off

- Cannot put battery into fire to avoid explosion.
- Must fix the battery right.
- Please connect the 5V power adapter on time when the battery runs out.

2. The hand-rolling piano can be wiped with soft and clean towel.

3. It should be rolled well after use.

4. Do not put the piano in hot and humid place.

VIII Instruction for the use of hand-rolling piano

- The battery need to be taken out when the piano is not used.
- When using the piano, it should be put in flat place, and do not move it during playing or the normal function may be effected and damaged.
- The piano cannot be rolled too lightly when putting it away, in case the normal function of the key is damaged and the life is shortened.
- Do not pull or twist the keyboard of the piano.
- Do not put the piano in the hot and humid place.
- Cannot split any part of the piano.
- Cannot put the piano in the place with strong wave, in case some function is damaged.

IX Simple troubleshooting (#2)

- If the piano stops or has abnormal sound when you are playing, maybe it is because the battery has been run out, please connect the power adapter on time.
- If the sound is abnormal or the piano key is invalid, please turn **[OFF]** off the power switch and restart to restore the original settings.

X Simple troubleshooting (#1)

- If the piano stops or has abnormal sound when you are playing, maybe it is because the battery has been run out of, and please replace the battery. (this situation only occurs when the piano is powered by battery)
- If the sound is abnormal or the piano key is invalid, please press **[OFF]** to turn off, then press **[ON]** again to restore the original setting.