

Catalogue

This hand rolling piano is a portable product with sophisticated structure design. So to avoid For your normal use and maintenance, please read carefully the below user manual, Recording, OOP and playback function Single finger chord and multi-finger chord Start/stop, synch, insert function key

Thank you sincerely for your buying our hand rolling piano.

especially the part for children, you must pay more attention.

1 + 17

Tone

Demo songs play

Drum kit

Sustain pedal

Teaching function

damage, please pay attention to the operation.

I Main Feature

30 demo songs

Digital display

88Key (A1~C9) standard piano

Master volume control key

Tempo control key

• 140 kinds of tone, 128 kinds of rhythms,

Mode selection key (tone and rhythm)

II Icons specification of panel function

•	Tone/ Rhythm selection -		(+)	Tone/ Rhythm selection+		4.
ne	Tone button	18	RHY	Rhythm button	1	
•)	Play button	19	ООР	OOP button	1	5.
C	Record button	20	Drum Kit	Drum kit button	1	
)	Start/ Stop button	21	Sustain	Sustain button	1	6.
no	Demo button	22	Vibrato	Vibrato button	1	
ert	Insert button	23	•	Volume control button+	1	
nc	Synch button	24	MP3	MP3 ON/OFF	1	
N	OKON button	25	•	Volume control button-	1	
nger	Single / Finger button	26	▶ ■))	Mp3 volume + / next song	1	•
)	Working LED indicator	27	MP3	Mp3 interface	1	7.
)	Charging LED indicator	28	POWER MIDI OUT	DC5V / MIDI OUT interface	1	•
	Tempo Control button +	29	HEAD PHONE	Headphone/Speaker interface	1	
	Tempo Control button -	30	SUSTAIN PEDAL	Sustain pedal	1	8.
j)	Start/Stop	31	OFF/MP3/MIDI OUT	Power switch for MP3 and	1	
H	Mp3 volume - / previous song			MIDI OUT		
					1	

Pressing at the same time, then the master volume will return to the default value.

Pressing(), (a)) at the same time, then the master volume will return to the default value.
It will play at the tempo of the song when playing a song.

Vibrato: Vibrato is a musical effect consisting of a regular, pulsating change of pitch.

128 kinds of rhythm, press rhythm() can adjust.
Drum kit: Diversified percussion tones, let each key play drum and other percussion sound.

 It will play at the selected tempo when playing selected rhythms. Tempo will back to default value 120 after it under dormant state.

• 140 kinds of GM tones, press tone(🕕 , 🛑)can adjust.

Sustain: Sustain is a parameter of musical sound over time.

Insert: Add prelude or ending section during rhythm when press Insert .

Sustain pedal: control sustain, chord or rhythm.

Sustain pedal: Control sustain, chord or rhythm.

3. Tone, rhythm setting

Rhythm play: Press start/stop.

					4 PEMO CONO.
<u> </u>	Tone/ Rhythm selection -	17	•	Tone/ Rhythm selection+	4. DEMO SONGS • There are 30 demos, press Demo start to play, press Demo again play the next song.
Tone	Tone button	18	RHY	Rhythm button	It will switch to tone mode when press
(Play button	19	OOP	OOP button	 5. (Single or Fingered) Chord Accompany: Press Synch can enter to single or fingered mode.
REC	Record button	20	Drum Kit	Drum kit button	Fingered can choose 20 white keys and 14 black keys of the base to extemporaneous accompaniment.
(FII)	Start/ Stop button	21	Sustain	Sustain button	6. Record and OOP:
Demo	Demo button	22	Vibrato	Vibrato button	 Press REC can record your original music, the maximum record note is 700, it cannot record when metronome stopped.
Insert	Insert button	23	•	Volume control button+	You can press at any moment to play record while recording. Every time pressing will delete the
Sync	Synch button	24	MP3	MP3 ON/OFF	memory last time and again enter into recording mode. • Press OOP enter into OOP mode, then will hear the sound of metronome, the default value is 120,
OKON	OKON button	25	(.	Volume control button-	can record the drum kit sound, cannot record if changed to another key.
Single/Finger	Single / Finger button	26	(III)	Mp3 volume + / next song	The maximum record note is 128, once it is full, it cannot record anymore, press to playback recording sound, repress it will delete the memory last time and again enter into recording mode.
•	Working LED indicator	27	MP3	Mp3 interface	7. OKON:
•	Charging LED indicator	28	POWER MIDI OUT	DC5V / MIDI OUT interface	 Press OKON, can play any key according to the melody, it will run up to the next section only after this melody finish, It will switch to tone mode when press Tone during OKON, after 3 seconds it will return
	Tempo Control button +	29	HEAD PHONE	Headphone/Speaker interface	to OKON.
(Tempo Control button -	30	SUSTAIN PEDAL	Sustain pedal	8. MP3 function:
▶II	Start/Stop	31	OFF/MP3/MIDIOUT	Power switch for MP3 and	 Mp3 switch: it is closed when power on, press MP3 button to turn on, repress MP3 button to turn off MP3 Play: insert the USB flash disk with MP3 songs into the USB interface on the side of the control box,
() □ [44	Mp3 volume - / previous song	7 "		MIDI OUT	turn on the MP3 switch, after the LED shows "IN" and turn to 000.
			I		Repress MP3 to play songs, keep pressing MP3 (MP4), (MP4) to adjust volume, press Mp3 (MP4), (MP4) to change songs, press (MP3) play button to play songs, repress it to stop.
me contro	n instruction 1~16) can be adjusted, the defa	ault valı	ue is 12 once	e power on.	9.Software for piano download from: http://kohoxo.com/en-piano.zip

Tone Number	Name	Tone Number	Name
Т00	Acoustic Grand Piano	T36	Slap Bass 1
T01	Bright Acoustic Piano	T37	Slap Bass 2
T02	Electric Grand Piano	T38	Synth Bass 1
T03	Honky-tonk Piano	T39	Synth Bass 2
T04	Rhodes Piano	T40	Violin
T05	Chorused Piano	T41	Viola
T06	Harpsichord	T42	Cello
T07	Clavichord	T43	Contrabass
T08	Celesta	T44	Tremolo Strings
T09	Glockenspiel	T45	Pizzicato Strings
T10	Music box	T46	Orchestral Harp
T11	Vibraphone	T47	Timpani
T12	Marimba	T48	String Ensemble 1
T13	Xylophone	T49	String Ensemble 2
T14	Tubular Bell	T50	Synth Strings 1
T15	Dulcimer	T51	Synth Strings 2
T16	Drawbar Organ	T52	Choir Aahs
T17	Percussive Organ	T53	Voice Oohs
T18	Rock Organ	T54	Synth Voice
T19	Church Organ	T55	Orchestra Hit
T20	Reed Organ	T56	Trumpet
T21	Accordion	T57	Trombone
T22	Harmonica	T58	Tuba
T23	Tango Accordion	T59	Muted Trumpet
T24	Acoustic Guitar (nylon)	T60	French Horn
T25	Acoustic Guitar (steel)	T61	Brass Section
T26	Electric Guitar (jazz)	T62	Synth Brass 1
T27	Electric Guitar (clean)	T63	Synth Brass 2
T28	Electric Guitar (muted)	T64	Soprano Sax
T29	Overdriven Guitar	T65	Alto Sax
T30	Distortion Guitar	T66	Tenor Sax
T31	Guitar Harmonics	T67	Baritone Sax
T32	Acoustic Bass	T68	Oboe
Т33	Electric Bass(finger)	T69	English Horn
T34	Electric Bass (pick)	T70	Bassoon

one Number	Name	Tone Number	Name
T72	Piccolo	T106	Shamisen
T73	Flute	T107	Koto
T74	Recorder	T108	Kalimba
T75	Pan Flute	T109	Bagpipe
T76	Bottle Blow	T110	Fiddle
T77	Shakuhachi	T111	Shanai
T78	Whistle	T112	Tinkle Bell
T79	Ocarina	T113	Agogo
T80	Lead 1 (square)	T114	Steel Drums
T81	Lead 2 (sawtooth)	T115	Woodblock
T82	Lead 3 (calliope lead)	T116	Taiko Drum
T83	Lead 4 (chiff lead)	T117	Melodic Tom
T84	Lead 5 (charang)	T118	Synth Drum
T85	Lead 6 (voice)	T119	Reverse Cymbal
T86	Lead 7 (fifths)	T120	Guitar Fret Noise
T87	Lead 8 (bass+lead)	T121	Breath Noise
T88	Pad 1 (new age)	T122	Seashore
T89	Pad 2 (warm)	T123	Bird Tweet
T90	Pad 3 (polysynth)	T124	Telephone Ring
T91	Pad 4 (choir)	T125	Helicopter
T92	Pad 5 (bowed)	T126	Applause
T93	Pad 6 (metallic)	T127	Gunshot
T94	Pad 7 (halo)	T128	Yong Gin
T95	Pad 8 (sweep)	T129	Zheng
T96	FX 1 (rain)	T130	Zhong Ruan
T97	FX 2 (soundtrack)	T131	Pi Pa
T98	FX 3 (crystal)	T132	Big Souna
Т99	FX 4 (atmosphere)	T133	Souna
T100	FX 5 (brightness)	T134	Er Hu
T101	FX 6 (goblins)	T135	Yue Hu
T102	FX7 (echoes)	T136	Di Zi
T103	FX 8 (sci-fi)	T137	Bong Di
T104	Sitar	T138	Koto
T105	Banjo	T139	Qu Di

ythm Number	Name	Rhythm Number	Name
	Club Pop	T36	Hully Gully
T01	16 Beat Pop	T37	Tarantella
T02	8 Beat Pop	T38	Limbo Rock
T03	8 Beat Soul	T39	R Swing Waltz
T04	8 Beat Rock	T40	Pub Piano
T05	Rap Pop	T41	Jazz Waltz 1
T06	Pop Rock	T42	Jazz Waltz 2
T07	60's Soul	T43	Show Tune
T08	70's Soul	T44	Polka
T09	Funk	T45	Bossanova
T10	16 Beat Shuffle	T46	Mambo 1
T11	Twist	T47	Mambo 2
T12	British Pop	T48	Bolero
T13	Hard Rock	T49	Cumbia
T14	Fusion	T50	Latin Rock
T15	FunkShuffl	T51	Disco Latin
T16	FusionShuffl	T52	Tijuana
T17	Rock'n Roll 1	T53	Reggae
T18	Rock'n Roll 2	T54	Salsa
T19	Straight Rock	T55	Calypso
T20	Jazz Rock	T56	GuadDance
T21	FastGospel	T57	Reggae12Beat
T22	FolkRock	T58	Reggae16Beat
T23	RockBilly	T59	Techno 1
T24	RockBoogie	T60	Techno 2
T25	RockChaCha	T61	Funky Disco
T26	RockClassical	T62	Saturday Night
T27	RockShuffle	T63	Club Latin
T28	RockPop	T64	Disco Chocolate
T29	Ober Polka	T65	Disco Fox
T30	Polka Pop	T66	Disco Funk
T31	Blue Grass 1	T67	Disco Hands
T32	Blue Grass 2	T68	Disco Party
T33	Blue Grass 3	T69	Disco Samba
T34	Pop Waltz	T70	UK Pop
T35	USA March	T71	Club Dance

one Number	Name	Tone Number
T72	Modern R&B	R100
T73	Hip Shuffle	R101
T74	Charleston	R102
T75	DiscoPop	R103
T76	DiscoSoul	R104
T77	DiscoTrot	R105
T78	EuroBeat	R106
T79	Rap	R107
T80	Rave	R108
T81	Waltz	R109
T82	Cha Cha	R110
T83	Rumba	R111
T84	Jive	R112
T85	Pasodoble	R113
T86	Samba 1	R114
T87	Samba 2	R115
T88	Schlager Rock 1	R116
T89	Schlager Rock 2	R117
T90	FoxTrot	R118
T91	Viennese Waltz	R119
T92	Tango1	R120
T93	Tango2	R121
T94	Slow Rock 1	R122
T95	Slow Rock 2	R123
T96	Slow Rock 3	R124
T97	Slow Soul	R125
T98	8 Beat Adria	R126
Т99	Classic Piano	R127

Name	Tone Number	Name		Demo Number	name	Demo Num
odern R&B	R100	Unplugged		D04	Childhood	D19
p Shuffle	R101	Pop Ballad		D05	Curved moon	D20
narleston	R102	Pop New Age		D06	Liuyang River	D21
scoPop	R103	8 Beat Modern		D07	Aobao Xianghui	D22
scoSoul	R104	Country Ballad		D08	Blossoming fruit trees in that place	D23
scoTrot	R105	Love Song		D09	Qinghai-Tibet Plateau	D24
ıroBeat	R106	Modern Country Pop		D10	Ali's girl	D25
ар	R107	Electro Pop		D11	Jasmine	D26
ave	R108	Acoustic Ballad		D12	Nanniwan	D27
altz	R109	Piano Ballad		D13	Grandma Penghu Bay	D28
na Cha	R110	R&B Ballad		D14	Sweet Honey	D29
ımba	R111	Rock Ballad				
ve .	R112	Slow & Easy				
asodoble	R113	Analog Ballad				
amba 1	R114	E_Ballad				
amba 2	R115	Big Band Shuffle 1				
chlager Rock 1	R116	Big Band Shuffle 2				
chlager Rock 2	R117	Big Band Shuffle 3				
xTrot	R118	Fast Band 1				
ennese Waltz	R119	Fast Band 2				
ngo1	R120	Cat Groove				
ngo2	R121	Dixie Jazz				
ow Rock 1	R122	Medium Jazz				
ow Rock 2	R123	Jazz Big Band				
ow Rock 3	R124	Jazz Club				
			1 1 1			

		This piano usindicator as	•	ble lithium battery(1000MA),please check the working position of Charging LED				
				Charries state	Red light			
				Charging state	CHRG			
Gangs All Here				Charging	Light on			
mories				Fully charged	Light off			
Ragtime Band				Battery misplaceed	Light off			
My Gal				Battery Illispiaceed	Light on			
s Band				Standby	Light off			

VII Maintenance of hand-rolling piano

1. Instruction for the use of battery:

Cannot mix old battery with new battery.

Must fix the battery right.

The battery run out of power should be taken out of the battery case in time.

2. The hand-rolling piano can be wiped with soft and clean towel.

3. It should be rolled well after use.

4. Do not put the piano in hot and humid place.

Ⅷ Instruction for the use of hand-rolling piano

 The battery need to be taken out when the piano is not be used. • When using the piano, it should be put in flat place, and do not move it during playing or the normal

function may be effected and damaged.

 The piano cannot be rolled too tightly when putting it away, in case the normal function of the key is damaged and the life is shortened.

Do not pull or twist the keyboard of the piano.
Do not put the piano in the hot and humid place.

Cannot split any part of the piano.

• Cannot put the piano in the place with strong wave, in case some function is damaged.

IX Simple troubleshooting

If the piano stops or has abnormal sound when you are playing, maybe it is because the battery has been run out of, and please replace the battery. (this situation only occurs when the piano is powered by

• If the sound is abnormal or the piano key is invalid, please press to turn off, then press again to

restore the original setting.