





		11110000110011	100	Cyntin Bass 2	1/4	
9.Sustain	T05	Chorused Piano	T40	Violin	T75	
Press "Sustain" to start this function, and press it again, function stoped.	Т06	Harpsichord	T41	Viola	T76	
10.Drum kit	Т07	Clavinet	T42	Cello	T77	
Press"Drum Kit", all the sounds will change into precussion sound, and stop it when you press it again.	T08	Celesta	T43	Contrabass	T78	
11.Single/fingered chord	Т09	Glockenspiel	T44	Tremolo Strings	T79	
• Press "Synch" button, LED display "ON" to enter single/fingered mode, then press "> "button, LED	T10	Music Box	T45	Pizzicato Strings	T80	
display "000", press "Single" button to start single chord, LED display "C01", or press "Fingered" button to start fingered chord, LED display "C02", user can play 14 white keys and 10 black keys on the bass.	T11	Vibraphone	T46	Orchestral Harp	T81	
(61keys can choose 5 white keys and 4 black keys in the bass) Press "▶ "button to stop. User can choose different rhythm with single/fingered.	T12	Marimba	T47	Timpani	T82	
oser can choose different mythin with single/inigered.	T13	Xylophone	T48	String Ensemble 1	T83	
12.Tenpo	T14	Tubular Bells	T49	String Ensemble 2	T84	
• Press" ★ "and" ✓ " to turn up and slow down the tempo.	T15	Santur	T50	SynthStrings 1	T85	
3.Metronome	T16	Hammond Organ	T51	SynthStrings 2	T86	
Metronome function control, press twice, function stop.	T17	Percussive Organ	T52	Choir Aahs	T87	
4.Sleep function	T18	Rock Organ	T53	Voice Oohs	T88	
It will enter into auto stand-by and sleep mode if there is no action after 1minite, press any key can wake up it.	T19	Church Organ	T54	Synth Voice	T89	
5.LED Indicator	T20	Reed Organ	T55	Orchestra Hit	T90	
ed LED light is power indicator	T21	Accordion	T56	Trumpet	T91	
D light is charging indicator, connect USB 5V adapter to power the built in li-ion battery when the	T22	Harmonica	T57	Trombone	T92	
lack of power. The red light will change to the green light when the battery is full	T23	Bandoneon	T58	Tuba	T93	
	T24	Acoustic Guitar (nylon)	T59	Muted Trumpet	T94	
6.Reset Press "Reset" button, the piano will return to the default mode.	T25	Acoustic Guitar(steel)	T60	French Horn	T95	
riess Neset button, the plant will return to the default mode.	T26	Electric Guitar (jazz)	T61	Brass Section	T96	
.Trans	T27	Electric Guitar (clean)	T62	Synth Brass 1	T97	_
There are 5 levels both for Flats and sharps, press "Trans" to choose, the LED will shows: -5, -4, -3,	T28	Electric Guitar (muted)	T63	Synth Brass 2	T98	
-2, -1, 0, 1, 2, 3, 4, 5, total 11 level.	T29	Overdriven Guitar	T64	Soprano Sax		_
8. Bluetooth Play Function	T30	Distortion Guitar	T65	Alto Sax		
 Open, bluetooth function is on automatically, bluetooth name is: Konix Piano, it will be sleeping after 3 minutes if bluetooth does not connect, need to re-connect when sleeping, need to re-openthen can 	T31	Guitar Harmonics	T66	Tenor Sax		
connect.(Only applicable for bluetooth audio version)1.9 Bluetooth MIDI Function	T32	Acoustic Bass	T67	Baritone Sax		
Can connect with the piano leaning APP in iPhone or iPad through bluetooth, GarageBand, PerfectPiano	T33	Electric Bass(finger)	T68	Oboe		
and another professional APP. Specific connection method (Take GarageBand as en example):download GarageBand in iPhone or iPad, open it, select the "setting" on the top right into the column to select	T34	Electric Bass(pick)	T69	English Horn		
"advanced", select the bluetooth MIDI device, then select "Konix midi"in bluetooth MIDI device, click		·				

	Tone Number	Name	Rhythm Nu
	Т99	FX 4 (atmosphere)	R000
	T100	FX 5 (brightness)	R001
	T101	FX 6 (goblins)	R002
	T102	FX7 (echoes)	R003
	T103	FX 8 (sci-fi)	R004
	T104	Sitar	R005
	T105	Banjo	R006
	T106	Shamisen	R007
	T107	Koto	R008
	T108	Alimba	R009
re)	T109	Bagpipe	R010
ooth)	T110	Fiddle	R011
pe lead)	T111	Shanai	R012
lead)	T112	Tinkle Bell	R013
ang)	T113	Agogo	R014
)	T114	Steel Drums	R015
)	T115	Woodblock	R016
+lead)	T116	Taiko Drum	R017
ge)	T117	Melodic Tom	R018
l	T118	Synth Drum	R019
nth)	T119	Reverse Cymbal	R020
	T120	Guitar Fret Noise	R021
1)	T121	Breath Noise	R022
ic)	T122	Seashore	R023
	T123	Bird Tweet	R024
o)	T124	Telephone Ring	R025
	T125	Helicopter	R026
rack)	T126	Applause	R027
1	T127	Gun shot	R028
			R029
			R030
			R031
			R032
			R033
			R034

	Rhythm Number	Name	Rhythm Number	Name		Rhythm Numb
sphere)	R000	Beguineswing	R035	Country16T]	R070
tness)	R001	Beguine1	R036	Tango1]	R071
ns)	R002	Beguine2	R037	Tango2	1	R072
es)	R003	Pophit	R038	Polka 1	1	R073
)	R004	Pop	R039	Polka 2	1	R074
	R005	Popmalay	R040	Popswing	1	R075
	R006	Bossanova	R041	Easyswing	1	R076
	R007	Disco 1	R042	Softswing	1	R077
	R008	Disco 2	R043	Rock 1	1	R078
	R009	Bluegrassdisco	R044	Rock 2	1	R079
	R010	Waltzl 1	R045	Rock 3	1	R080
	R011	Waltzl 2	R046	Airyrock	1	R081
	R012	Trueballadwaltz	R047	Heartrock	1	R082
	R013	Bossawaltz	R048	Rock&roll	1	R083
	R014	Easywaltz	R049	Urban	1	R084
	R015	Shufflewaltz	R050	Ballad	1	R085
	R016	Reggaewaltz	R051	Jazzballad]	R086
	R017	Rhumbawaltz	R052	C.Ballad	1	R087
	R018	March 1	R053	4J.Ballad]	R088
	R019	March 2	R054	60Slowballad	1	R089
	R020	Rhumba1	R055	PianoBallad	1	R090
	R021	Rhumba2	R056	50Sballad	1	R091
	R022	Slow1	R057	Snakebase	1	R092
	R023	Slow2	R058	Happyblues	1	R093
	R024	Discocha	R059	Oldblues	1	R094
	R025	Guaracha	R060	Bluegrass]	R095
	R026	Charl	R061	Boodie1		R096
	R027	Samba1	R062	Boodie2]	R097
	R028	Samba2	R063	Boodie3]	R098
	R029	Ubminimal	R064	Shuffle 1]	
	R030	8Bit1	R065	Shuffle 2]	
	R031	8Bit2	R066	Dreamshuffle]	
	R032	16Bit1	R067	Countryshuffle]	
	R033	16Bit2	R068	Quickshuffle	1	
	R034	Ballad16T	R069	Reggaeshuffle	1	

ber	Name		Rhythm Number	Name	Rhythm N
	Country16T		R070	R&B	R09
	Tango1		R071	1Reggaepulse	R10
	Tango2		R072	Reggae1	R10
	Polka 1		R073	Reggae2	R10
	Polka 2		R074	Salsa1	R10
	Popswing		R075	Salsa2	R10
	Easyswing		R076	Salsa3	R10
	Softswing		R077	Tecno 1	R10
	Rock 1		R078	Tecno 2	R10
	Rock 2		R079	Funky 1	R10
	Rock 3		R080	Funky 2	R10
	Airyrock		R081	Dixie 1	R11
	Heartrock		R082	Dixie 2	R11
	Rock&roll		R083	Foxtrot 1	R11
	Urban		R084	Foxtrot 2	R11
	Ballad		R085	R.roll 1	R11
	Jazzballad		R086	R.roll 2	R11
	C.Ballad		R087	Fastbeat	R11
	4J.Ballad		R088	Quickbeat	R11
	60Slowballad		R089	Smoothbeat	R11
	PianoBallad		R090	Squarebeat	R11
	50Sballad		R091	Eurobeat	R12
	Snakebase		R092	Alphadance	R12
	Happyblues		R093	Betadance	R12
	Oldblues		R094	Dreamdance	R12
	Bluegrass		R095	Dance1	R12
	Boodie1		R096	Dance2	R12
	Boodie2		R097	Dance3	R12
	Boodie3		R098	Rap	R12
	Shuffle 1			•	
	Shuffle 2				
		1 1			

thm Number	Name	Demo Number	Name	Demo N	lumber	Name
R099	Thevillage	D00	Lily.mid	D	07	Milk Song
R100	Countryshuffle	D01	Winter Sonata	D	08	Childhood Memory
R101	Electrickeys	D02	Kiyomi_Cutie Song	D	09	Come into my drean
R102	Darkkeys	D03	Beautiful Jazz	D.	10	Violin HumorseQue
R103	Easywalk	D04	Foreat Mist-Neptun	D.	11	Snowdreams
R104	Destiny	D05	Destiny	D.	12	Dance of fireflie
105	Comedy	D06	Poety of the Bird	D.	13	My Soul
R106	Drive	VII Maintenance	of hand-roll piano			
R107	Liquidnova		the use of battery:			
R108	Kindustrialfolk	• This piano use re	chargeable lithium battery(110	0MA),pleas	se check the w	vorking position of Ch
R109	Slowpure	indicator as follow:				
R110	SimpleJam			Red light	Green light	
111	Synthethix		Charging state			_
12	Feel			CHRG	STDBY	
113	Accelerate		Charging	Light on	Light off	
114	Beachnight		Fully charged	Light off	Light on	1
R115	Irish			Light on	Light on	_
R116	Tarantella		Battery misplaceed	Light off	Light off	
R117	Bigband		Standby	Light off	Light off	
	Dandut			-		J
R118		• Cannot put hatter	y into fire to avoid explosion.			
	Fusion	Gaimet put butter				
R119	Fusion House	Must fix the batte	ry right.			
R119 R120		Must fix the batte		nen the bat	tery runs out.	
R119 R120 R121	House	Must fix the batte Please connect th 2. The hand-roll	ry right. ne 5V power adapter on time wi piano can be clean with soft an		•	
R119 R120 R121 R122	House Keron	Must fix the batte Please connect th 2. The hand-roll 3. It should be ro	ry right. ne 5V power adapter on time wi piano can be clean with soft an lled well after use.		•	
R118 R119 R120 R121 R122 R123 R124 R124	House Keron Latin	Must fix the batte Please connect th 2. The hand-roll 3. It should be ro	ry right. ne 5V power adapter on time wi piano can be clean with soft an		•	
R119 R120 R121 R122 R123	House Keron Latin Mambo	Must fix the batte Please connect th 2. The hand-roll 3. It should be ro 4. Do not put the	ry right. ne 5V power adapter on time wi piano can be clean with soft an lled well after use.	d clean tow	•	
19 20 21 22 23 24	House Keron Latin Mambo Newage	Must fix the batte Please connect th 2. The hand-roll 3. It should be ro 4. Do not put the VII Instruction • When using th	ry right. ne 5V power adapter on time wi piano can be clean with soft an Illed well after use. piano in hot and humid place.	d clean tow	vel.	t during playing or the

D00	Lily.mid	D	07	Milk Song
D01	Winter Sonata	D	08	Childhood Me
D02	Kiyomi_Cutie Song	D	09	Come into my
D03	Beautiful Jazz	D.	10	Violin Humors
D04	Foreat Mist-Neptun	D.	11	Snowdreams
D05	Destiny	D.	12	Dance of firef
D06	Poety of the Bird	D.	13	My Soul
This piano use dicator as follo [,]	rechargeable lithium battery(110 w:			¬
		Red light	Green ligh	t
	Charging state	CHRG	STDBY	7
	Charging	Light on	Light off	
	Fully charged	Light off	Light on	
	Battery misplaceed	Light off	Light off	
	Standby	Light off	Light off	
Must fix the bar Please connec 2. The hand-ro 3. It should be 4. Do not put t	t the 5V power adapter on time woll piano can be clean with soft and rolled well after use. The piano in hot and humid place.	nd clean tow	,	<u>.</u>
VIII Instructio	on for the use of hand-roll pia	no		