

Roll Up Piano


USER MANUAL

Thank you sincerely for buying our hand roll piano. We are specialized in developed and manufactured hand roll piano and drum kit for over 15years. This hand roll piano is a handy size product which very easy to carry. in order to have a best experience effect, please pay attention to the operation, wish you enjoy it, thanks again for your cooperation!

I Main Feature

- 61/88 Keys standard piano.
- Digital display.
- Auto sleep mode.
- 128 kinds of tone, 128 kinds of rhythms and 14 demo songs.
- Mode selection key (tone and rhythm).
- Sustain pedal.
- Tone choose by numbers.
- Synchro function, single/fingered chord.
- Recording, programming and playback function.
- Demo songs play, tutorial function.
- Start/stop insert function key.
- Drum kit function.
- Sustain and vibrato function
- Master volume control key,tempo control key.
- Microphone, audio input function.
- Midi Out,USB 5V power adapter.
- Sustain pedal.
- Earphone/speaker output interface.
- Power supply:
 - 1.by USB 5V power adapter.
 - 2.by built in 1100mA li-ion battery.
- With speaker inside, can use as Bluetooth speaker (only for Bluetooth version)

II Icons specification of panel function

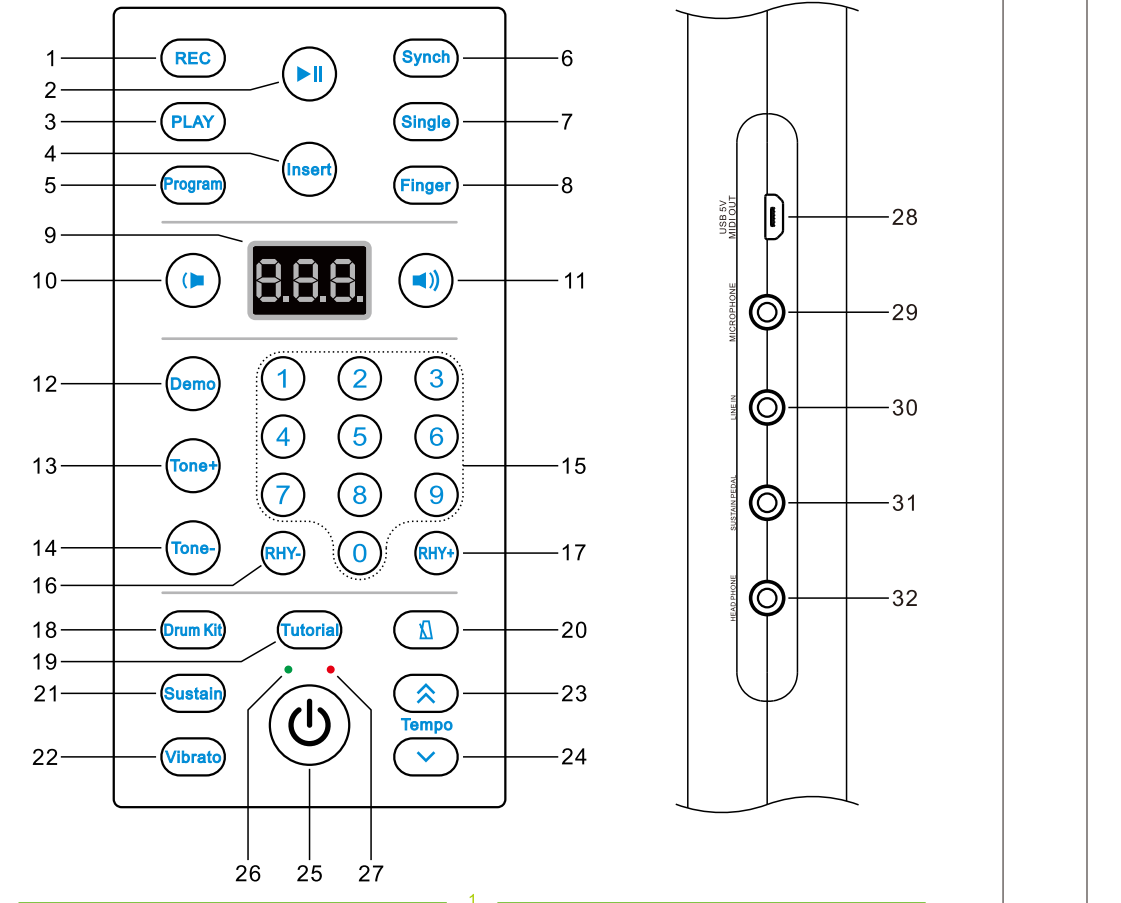

1	REC	Record	17	RHY+	RHY+
2	▶	Start/Stop	18	Drum Kit	Drum Kit
3	PLAY	Play	19	Tutorial	Tutorial
4	Insert	Insert	20	⏏	Metronome
5	Program	Program	21	Sustain	Sustain
6	Synch	Synch	22	Vibrato	Vibrato
7	Single	Single chord	23	⏏	Tempo Control+
8	Fingering	Fingered chord	24	⏏	Tempo Control-
9	0.0.0	LED display	25	⏏	Power Switch
10	▶	Volume Control-	26	●	Charging Indicator
11	▶	Volume Control+	27	●	Power Indicator
12	Demo	Demo	28	USB 5V	MIDI OUT/USB 5V
13	Tone+	Tone+	29	🎙	Microphone Port
14	Tone-	Tone-	30	🔌	Line in port
15	Number	Tone choose by numbers	31	🔌	Sustain input interface
16	RHY-	RHY-	32	🎧	Headphone/Speaker interface

III Product Function description

1.Tone

- Include 128 tones.
- The initial settings for this tone number is "000",press "Tone+/Tone-" to choose what you like.
- Can choose different tones from 000 to 127 directly by press the numbers.

2.Rhythm

- Include 128 rhythms.
- When you press "▶||",the piano will automatically enter into the playback mode ,LCD with number"000", press "▶||" again, the rhythm will stop.
- You can use "RHY+/RHY-" to control rhythm.
- The user can press "Insert" to insert 1-2 bits at the basic rhythm when it is in rhythm mode.

3.Demo

- 14 demo songs.
- Try to press "Demo", will automatically play demo songs, and initial number is "001", press the button "Demo" again, you could cycle all the demo songs.
- The user could play piano with demo songs.

4.Tutorial

- Press the "Tutorial"to enter into the function.

5.Record/Play

- Press "REC",when it indicate "REC" at LED display ,you can record now.
- Press "PLAY" button, LED display "REP".
- You can press the button "PLAY" to show what you had record just now, and will continue for only one time.
- When it is in "PLAY" mode, user could prss "▶||" button to stop it.
- If you need record again, every settings will be back to initial.

6.Program

- Automatically records rhythm and edit your beats when press button "Program".
- Press "PLAY", program function stoped and play your beats which you have just now.
- Press "▶||" to stop playing beats.

7.Volme

- Using "▶/▶" to control volume which you need, the initial seetting is level 12, and the MAX volume is level 15.

8.Vibrato

- Press "Vibrato" to star this funtion, and press it again , function stoped.

9.Sustain

- Press "Sustain" to start this function, and press it again, function stoped.

10.Drum kit

- Press "Drum Kit", all the sounds will change into percussion sound, and stop it when you press it again.

11.Single/fingered chord

- Press "Synch" button, LED display "ON" to enter single/fingered mode, then press "▶||"button, LED display "000", press "Single" button to start single chord. LED display "001", or press "Fingering" button to start fingering chord, LED display "002", user can play 14 white keys and 10 black keys on the bass. (61keys can choose 5 white keys and 3 black keys in the bass) Press "▶||"button to stop.
- User can choose different rhythm with single/fingered.

12.Tempo

- Press "⏏"and"⏏" to turn up and slow down the tempo.

13.Metronome

- Metronome function control, press twice, function stop.

14.Sleep function

- It will enter into auto stand-by and sleep mode if there is no action after 1minute, press any key can wake up it.

15.LED indicator

- Red LED light is power indicator. Press "⏏" button to light on the power indicator and display screen ,LED indicator also light on under sleep mode.Repress "⏏" button, red indicator and display screen light off.
- Green LED light is charging indicator, connect USB 5V adapter to power the built in li-ion battery when the battery is lack of power. When green indicator light off it means the battery is fully charged.

16.Power ON/OFF button

- First press 1S of this button"⏏"to open.Second press of this button"⏏"to close.

Attention:please insert the USB cable to supply the power in the first time,meanwhile it can be used normally and charging for the battery inside.

17.Bluetooth function (only for Bluetooth version)

The Bluetooth function opens automatically and has a hint. Bluetooth has started waiting for a phone to play accompaniment or music. The mobile phone search to Konix-Music for connection. After the connection is successful, there is a hint, volume addition or music selection needs to be carried out on the mobile phone.

IV Accessory one:lists of tone

Tone Number	Name	Tone Number	Name
T00	Piano 1	T35	Fretless Bass
T01	Piano 2	T36	Slap Bass 1
T02	Piano 3	T37	Slap Bass 2
T03	Honky-Tonk Piano	T38	Synth Bass 1
T04	Rhodes Piano	T39	Synth Bass 2
T05	Chorused Piano	T40	Violin
T06	Harpsichord	T41	Viola
T07	Clavinet	T42	Cello
T08	Celesta	T43	Contrabass
T09	Glockenspiel	T44	Tremolo Strings
T10	Music Box	T45	Pizzicato Strings
T11	Vibraphone	T46	Orchestral Harp
T12	Marimba	T47	Timpani
T13	Xylophone	T48	String Ensemble 1
T14	Tubular Bells	T49	String Ensemble 2
T15	Santur	T50	SynthStrings 1
T16	Hammond Organ	T51	SynthStrings 2
T17	Percussive Organ	T52	Choir Aahs
T18	Rock Organ	T53	Voice Oohs
T19	Church Organ	T54	Synth Voice
T20	Reed Organ	T55	Orchestra Hit
T21	Accordion	T56	Trumpet
T22	Harmonica	T57	Trombone
T23	Bandoneon	T58	Tuba
T24	Acoustic Guitar (nylon)	T59	Muted Trumpet
T25	Acoustic Guitar(steel)	T60	French Horn
T26	Electric Guitar (jazz)	T61	Brass Section
T27	Electric Guitar (clean)	T62	Synth Brass 1
T28	Electric Guitar (muted)	T63	Synth Brass 2
T29	Overdriven Guitar	T64	Soprano Sax
T30	Distortion Guitar	T65	Alto Sax
T31	Guitar Harmonics	T66	Tenor Sax
T32	Acoustic Bass	T67	Baritone Sax
T33	Electric Bass(finger)	T68	Oboe
T34	Electric Bass(pick)	T69	English Horn

V Accessory two:lists of rhythm

Rhythm Number	Name	Rhythm Number	Name
R000	Beguineswing	R035	Country16T
R001	Beguine1	R036	Tango1
R002	Beguine2	R037	Tango2
R003	Pophit	R038	Polka 1
R004	Pop	R039	Polka 2
R005	Popmalay	R040	Popswing
R006	Bossanova	R041	Easyswing
R007	Disco 1	R042	Softswing
R008	Disco 2	R043	Rock 1
R009	Bluegrassdisco	R044	Rock 2
R010	Waltz1	R045	Rock 3
R011	Waltz2	R046	Airyrock
R012	Trueballadwaltz	R047	Heartrock
R013	Bossawaltz	R048	Rock&roll
R014	Easywaltz	R049	Urban
R015	Shufflewaltz	R050	Ballad
R016	Reggaewaltz	R051	Jazzballad
R017	Rhumbawaltz	R052	C.Ballad
R018	March 1	R053	4J.Ballad
R019	March 2	R054	60Slowballad
R020	Rhumba 1	R055	PianoBallad
R021	Rhumba2	R056	50Sballad
R022	Slow1	R057	Snakebase
R023	Slow2	R058	Happyblues
R024	Discocha	R059	Oldblues
R025	Guaracha	R060	Bluegrass
R026	Charl	R061	Boodie1
R027	Samba1	R062	Boodie2
R028	Samba2	R063	Boodie3
R029	Ubminimal	R064	Shuffle 1
R030	8Bit1	R065	Shuffle 2
R031	8Bit2	R066	Dreamshuffle
R032	16Bit1	R067	Countryshuffle
R033	16Bit2	R068	Quickshuffle
R034	Ballad16T	R069	Reggaeshuffle

VI Accessory three:name lists of demo

Demo Number	Name	Demo Number	Name
D00	Lily.mid	D07	Milk Song
D01	Winter Sonata	D08	Childhood Memory
D02	Kiyomi_Cutie Song	D09	Come into my dream
D03	Beautiful Jazz	D10	Violin HumorseQue
D04	Foreat Mist-Neptun	D11	Snowdreams
D05	Destiny	D12	Dance of fireflie
D06	Poety of the Bird	D13	My Soul

VII Maintenance of hand-roll piano

1. The hand-roll piano can be clean with soft and clean towel.
2. It should be rolled well after use.
3. Do not put the piano in hot and humid place.

VIII Instruction for the use of hand-roll piano

- When using the piano, it should be put in flat place, and do not move it during playing or the normal function may be effected and damaged.
- The piano cannot be rolled too tight when putting it away, in case the normal function of the key is damaged and the product life is shortened.
- Do not pull or twist the keyboard of the piano.
- Do not put the piano in the hot and humid place.
- Cannot split any part of the piano.
- Cannot put the piano in the place with strong wave, in case some function is damaged.

IX Troble shooting

- If the sound is abnormal or the piano key is invalid, please press ⏏ to turn off, then press ⏏ again to restore the original setting.