



Thank you sincerely for buying our hand roll piano. We are specialized in developed and manufactured hand roll piano and drum kit for over 15years. This hand roll piano is a handy size product which very easy to carry. In order to have a best experience effect, please pay attention to the operation, wish you enjoy it, thanks again for your cooperation!

I Main Feature

- 8188 Keys standard piano.
- Digital display.
- Auto sleep mode.
- 128 kinds of tone, 128 kinds of rhythms and 14 demo songs.
- Mode selection key (tone and rhythm).
- Recording, programming and playback function.
- Demo songs play tutorial function.
- Start/stop insert function key.
- Piano/Drum kit function.

II Icons specification of panel function

1. Tone

- Sustain and vibrato function
- Master volume control key/ tempo control key.
- MIDI Out/USB 5V power adapter.
- Sustain pedal
- Earphone/speaker output interface.
- Power supply
- 1 by USB 5V power adapter.
- 2 by built-in 1100mAh-ion battery.
- 3 by 4*AAA battery (Built-in lithium battery without AAA battery compartments)

III Product Function description

1. Tone

- Include 128 tones.
- The initial settings for this tone number is "000", press "Tone+" "Tone-" to choose what you like.

2. Rhythm

- Include 128 rhythms.
- When you press "RHY", the piano will automatically enter into the playback mode, LCD with number "000", press "RHY" again, the rhythm will stop.
- You can use "RHY+" "RHY-" to control rhythm.
- The user can press "Insert" to insert 1-2 bits at the basic rhythm when it is in rhythm mode.

3. Demo

- 14 demo songs.
- Try to press "Demo" will automatically play demo songs, and initial number is "001", press the button "Demo" again, you could cycle all the demo songs.
- The user could play piano with demo songs.

4. Tutorial

- Press the "Tutorial" to enter into the function.

5. Record/Play

- Press "REC" when it indicate "REC" at LED display, you can record now.
- Press "▶" button, LED display "REP".
- You can press the button "▶" to show what you had record just now, and will continue for only one time.
- When it is in "▶" mode, user could press "▶" button to stop it.
- If you need record again, every settings will be back to initial.

software for piano download from: <http://kohoko.com/en-piano.zip>

WINDOWS MAC OS Sustain MIDI OUT

1	000	LED display	16	Piano	Piano
2	Tone-	Tone-	17	Tutorial	Tutorial
3	Tone+	Tone+	18	Tempo Control+	Tempo Control+
4	RHY-	RHY-	19	Volume Control-	Volume Control-
5	RHY+	RHY+	20	Volume Control+	Volume Control+
6	REC	Record	21	Power Switch	Power Switch
7	▶	Play	22	LED Indicator	LED Indicator
8	0	Metronome	23	Headphone/Speaker Interface	Headphone/Speaker Interface
9	Demo	Demo	24	Sustain Input Interface	Sustain Input Interface
10	Program	Program	25	MIDI Output/USB 5V	MIDI Output/USB 5V
11	▶	Start/Stop	26	Drum Kit	Drum Kit
12	Drum Kit	Drum Kit	27	Insert	Insert
13	Insert	Insert	28	Single	Single
14	Sustain	Sustain	29	Finger	Finger
15	Vibrato	Vibrato	30	Finger	Finger

IV Accessory one-lists of tone

Tone Number	Name	Tone Number	Name
T00	Piano 1	T35	Freeless Bass
T01	Piano 2	T36	Step Bass 1
T02	Piano 3	T37	Step Bass 2
T03	Honky-Tonk Piano	T38	Synth Bass 1
T04	Rhodes Piano	T39	Synth Bass 2
T05	Chorused Piano	T40	Violin
T06	Harpisynth	T41	Viola
T07	Cloviinet	T42	Cello
T08	Celesta	T43	Contrabass
T09	Glockenspiel	T44	Tremolo Strings
T10	Music Box	T45	Pizzicato Strings
T11	Vibraphone	T46	Orchestral Harp
T12	Marmite	T47	Timpani
T13	Xylophone	T48	String Ensemble 1
T14	Tubular Bells	T49	String Ensemble 2
T15	Santur	T50	SynthStrings 1
T16	Hammond Organ	T51	SynthStrings 2
T17	Percussive Organ	T52	Choir Aahs
T18	Rock Organ	T53	Voice Oohs
T19	Church Organ	T54	Synth Voice
T20	Reed Organ	T55	Orchestra Hit
T21	Accordion	T56	Trumpet
T22	Harmonica	T57	Trombone
T23	Bandswon	T58	Tuba
T24	Acoustic Guitar (nylon)	T59	Muted Trumpet
T25	Acoustic Guitar (steel)	T60	French Horn
T26	Electric Guitar (jazz)	T61	Brass Section
T27	Electric Guitar (clean)	T62	Synth Brass 1
T28	Electric Guitar (muted)	T63	Synth Brass 2
T29	Overdriven Guitar	T64	Soprano Sax
T30	Distortion Guitar	T65	Alto Sax
T31	Guitar Harmonics	T66	Tenor Sax
T32	Acoustic Bass	T67	Baritone Sax
T33	Electric Bass (finger)	T68	Oboe
T34	Electric Bass (pick)	T69	English Horn

6. Program

- Automatically records rhythm and edit your beats when press button "Program".
- Press "▶" program function stopped and play your beats which you have just now.
- Press "▶|" to stop playing beats.

7. Volume

- Using "▲" "▼" to control volume which you need, the initial setting is level 12, and the MAX volume is level 15.

8. Vibrato

- Press "Vibrato" to star this funtion, and press it again, function stopped.
- Press "Sustain" to start this function, and press it again, function stopped.

9. Sustain

- Press "Sustain" to start this function, and press it again, function stopped.

10. Drum kit

- Press "Drum Kit", all the sounds will change into percussion sound, and stop it when you press it again.

11. Single/fingered chord

- Press "Synch" button, LED display "ON" to enter single/fingered mode, then press "▶|" button, LED display "000", press "Finger" button to start single chord, LED display "001", or press "Fingered" button to start fingered chord, LED display "002", user can play 14 white keys and 10 black keys on the bass. (6 keys can choose 5 white keys and 3 black keys in the bass) Press "▶|" button to stop.
- User can choose different rhythm with single/fingered.

12. Tempo

- Press "▲" and "▼" to turn up and slow down the tempo.

13. Metronome

- Metronome function control, press twice, function stop.

14. Sleep function

- It will enter into auto stand-by and sleep mode if there is no action after 15minite, press any key can wake up it.

15. LED Indicator

- Red LED light to power indicator. Press "▶" button to light on the power indicator and display screen, LED indicator also light on under sleep mode. Repress "▶" button, red indicator and display screen light off.
- Green LED light is charging indicator, connect USB 5V adapter to power the built-in ion battery when the battery is lack of power. When green indicator light off it means the battery is fully charged.

16. Power ON/OFF button

- First press 1S of this button "▶" to open. Second press of this button "▶" to close.

Attention: please insert the USB cable to supply the power in the first time, meanwhile it can be used normally and charging for the battery inside.

V Accessory two-lists of rhythm

Rhythm Number	Name	Rhythm Number	Name
R000	Begunnewing	R035	Country 1&T
R001	Begunel	R036	Tango1
R002	Begunee2	R037	Tango2
R003	Pophit	R038	Polka 1
R004	Pop	R039	Polka 2
R005	Popmalay	R040	Poppwing
R006	Bossanova	R041	Easywing
R007	Disco 1	R042	Softwing
R008	Disco 2	R043	Rock 1
R009	Bluegrassdisco	R044	Rock 2
R010	Waltz 1	R045	Rock 3
R011	Waltz 2	R046	Airyrock
R012	Tramballawaltz	R047	Hearrock
R013	Bassawaltz	R048	Rockkrot
R014	Easywaltz	R049	Urban
R015	Shuffewaltz	R050	Ballad
R016	Reggawaltz	R051	Jazzballad
R017	Rhumbawaltz	R052	C. Ballad
R018	March 1	R053	41 Ballad
R019	March 2	R054	60Slowballad
R020	Rhumba 1	R055	PianoBallad
R021	Rhumba2	R056	Guitar Fret Noise
R022	Slow 1	R057	Snakebase
R023	Slow2	R058	Hippylures
R024	Discocha	R059	Bird Tweet
R025	Guaracha	R060	Bluegrass
R026	Charl	R061	Boodie 1
R027	Samba1	R062	Boodie 2
R028	Samba2	R063	Boodie3
R029	Latinmimel	R064	Shuffe 1
R030	8Bit1	R065	Shuffe 2
R031	8Bit2	R066	Dreamshuffe
R032	16Bit1	R067	Countryshuffe
R033	16Bit2	R068	Quickshuffe
R034	Ballad1&T	R069	Reggashuffe

Tone Number	Name	Tone Number	Name
T70	Bassoon	T99	FX 4 (atmosphere)
T71	Clarinnet	T100	FX 5 (brightness)
T72	Piccolo	T101	FX 6 (goblin)
T73	Flute	T102	FX 7 (echoes)
T74	Recorder	T103	FX 8 (sci-fi)
T75	Pan Flute	T104	Sitar
T76	Bottle Blow	T105	Banjo
T77	Skakuhachi	T106	Shamisen
T78	Whistle	T107	Koto
T79	Ocarina	T108	Alimba
T80	Lead 1 (square)	T109	Bagpipe
T81	Lead 2 (sawtooth)	T110	Fiddle
T82	Lead 3 (collage lead)	T111	Shanai
T83	Lead 4 (riff lead)	T112	Trunk Bell
T84	Lead 5 (chirping)	T113	Agogo
T85	Lead 6 (voice)	T114	Steel Drums
T86	Lead 7 (fifths)	T115	Woodblock
T87	Lead 8 (bass-head)	T116	Tako Drum
T88	Pad 1 (love gap)	T117	Melodic Tom
T89	March 2 (warm)	T118	Synth Drum
T90	Pad 2 (polysynth)	T119	Reverse Cymbal
T91	Pad 4 (choir)	T120	Guitar Fret Noise
T92	Pad 5 (bowed)	T121	Breath Noise
T93	Pad 6 (maracas)	T122	Seashore
T94	Pad 7 (halo)	T123	Wind Tweet
T95	Pad 8 (sweep)	T124	Telephone Ring
T96	FX 1 (rain)	T125	Helicopter
T97	FX 2 (soundtrack)	T126	Applause
T98	FX 3 (crystal)	T127	Gun shot

Rhythm Number	Name	Rhythm Number	Name
R070	R&B	R099	Thevillage
R071	Reggae1	R100	Countryshuffe
R072	Reggae2	R101	Electrokeys
R073	Reggae2	R102	Darkkeys
R074	Salsa1	R103	Easywalk
R075	Salsa2	R104	Destiny
R076	Salsa3	R105	Comedy
R077	Tecno 1	R106	Drive
R078	Tecno 2	R107	Liquidnova
R079	Funky 1	R108	Kindustrialfolk
R080	Funky 2	R109	Slowpura
R081	Diva 1	R110	SimpleJam
R082	Diva 2	R111	Synthethic
R083	Foxrot 1	R112	Feel
R084	Foxrot 2	R113	Accelerate
R085	R.rol 1	R114	Beachnight
R086	R.rol 2	R115	Irish
R087	Fastbeat	R116	Tarantella
R088	Quinobeat	R117	Sighand
R089	Smoothbeat	R118	Dandut
R090	Squarebeat	R119	Fusion
R091	Eurobeat	R120	House
R092	Alphadance	R121	Keron
R093	Retadance	R122	Latin
R094	Dreandance	R123	Mambo
R095	Dance1	R124	Newage
R096	Dance2	R125	Slowrc
R097	Dance3	R126	Souji
R098	Rap	R127	Twist

VI Maintenance of hand-roll piano

- The hand-roll piano can be clean with soft and clean towel.
- It should be rolled well after use.
- Do not put the piano in hot and humid place.

VII Instruction for the use of hand-roll piano

- When using the piano, it should be put in flat place, and do not move it or function may be effected and damaged.
- The piano cannot be rolled too tight when putting it away, in case the no damaged and the product life is shortened.
- Do not pull or twist the keyboard of the piano.
- Do not put the piano in the hot and humid place.
- Cannot split any part of the piano.
- Cannot put the piano in the place with strong wave, in case some functi

VIII Trouble shooting

- If the sound is abnormal or the piano key is invalid, please press "▶" to restore the original setting.

IX Accessory three-name lists of demo

Demo Number	Name	Demo Number
D00	Lily mid	D07
D01	Winter Sonata	D08
D02	Kiyomi, Gullie Song	D09
D03	Beautiful Jazz	D10
D04	Forest Mid-Neptun	D11
D05	Destiny	D12
D06	Poety of the Bird	D13