



# Roll Up Piano

## USER MANUAL

Thank you sincerely for buying our hand roll piano.  
We are specialized in developed and manufactured hand roll piano and drum kit for over 15 years.  
This hand roll piano is a handy size product which very easy to carry, in order to have a best experience effect, please pay attention to the operation, wish you enjoy it, thanks again for your cooperation!

**I Main Feature**

- 88 Keys standard piano.
- Digital display
- Auto sleep mode
- 128 kinds of tone, 128 kinds of rhythms and 14 demo songs.
- Mode selection key (tone and rhythm).
- Tone choose by numbers.
- Synchro function, single/fingered chord.
- Recording, programming and playback function.
- Demo songs play, tutorial function.
- Looping insert function key.
- Drum kit function.
- Sustain and vibrato function
- Master volume control key/ tempo control key.
- Microphone, audio input function.
- Mini Out USB V power adapter
- Sustain pedal
- Earphone/speaker output interface.
- Power supply
- 1 by USB V power adapter.
- 2 External lithium battery 3.7V/1700mAh
- With double stereo speaker inside, can use as Bluetooth speaker (only for Bluetooth version)
- Bluetooth speaker (only for Bluetooth version)
- Bluetooth MIDI Function (only for Bluetooth MIDI version)

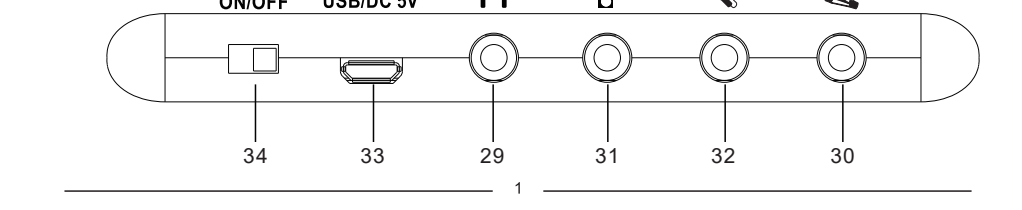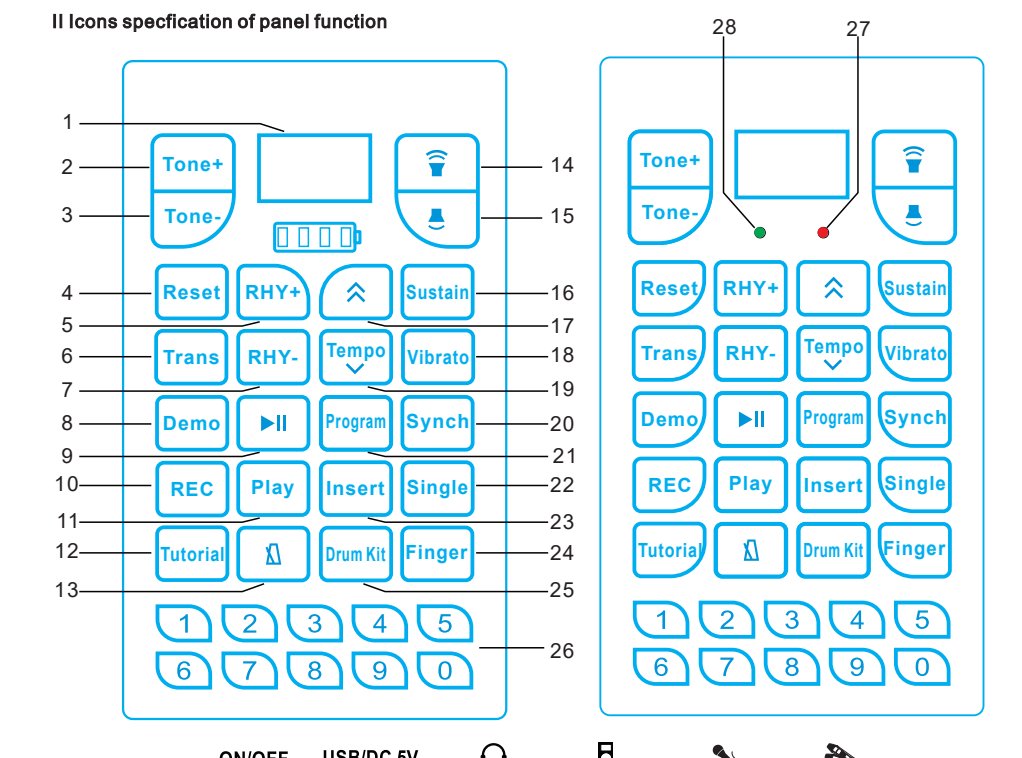

1	LED display	18	Vibrato
2	Tone+ Tone+	19	Tempo Control-
3	Tone- Tone-	20	Synch
4	Reset	21	Program
5	RHY+ RHY+	22	Single
6	Trans	23	Insert
7	RHY- RHY-	24	Fingered
8	Demo	25	Drum Kit
9	Start/Stop	26	Number
10	REC	27	Charging Indicator
11	PLAY	28	Power Indicator
12	Tutorial	29	Headphone/Speaker interface
13	Volume Control+	30	Sustain input interface
14	Volume Control-	31	Line in port
15	Microphone Port	32	Microphone Port
16	Sustain	33	MIDI OUT/USB V
17	Tempo Control+	34	ON/OFF Power ON/OFF

**III Product Function description**

**1. Tone**

- Include 128 tones.
- The initial settings for this tone number is "000", press "Tone+/Tone-" to choose what you like.
- Can choose different tones from 000 to 127 directly by press the numbers.

**2. Rhythm**

- Include 128 rhythms.
- When you press "RHY+", the piano will automatically enter into the playback mode, LCD with number "000", press "RHY-" again, the rhythm will stop.
- You can use "RHY+/RHY-" to control rhythm.
- The user can press "insert" to insert 1-2 bits at the basic rhythm when it is in rhythm mode.

**3. Demo**

- 14 demo songs.
- Try to press "Demo", will automatically play demo songs, and initial number is "001", press the button "Demo" again, you could cycle all the demo songs.
- The user could play piano with demo songs.

**4. Tutorial**

- Press the "Tutorial" to enter into the function.

**5. Record/Play**

- Press "REC" when it indicate "REC" at LED display, you can record now.
- Press "PLAY" button, LED display "REP".
- You can press the button "PLAY" to show what you had record just now, and will continue for only one time.
- When it is in "PLAY" mode, user could press "PLAY" button to stop it.
- If you need record again, every settings will be back to initial.

**6. Program**

- Automatically records rhythm and edit your beats when press button "Program".
- Press "RHY+" program function stopped and play your beats which you have just now.
- Press "RHY-" to stop playing beats.

**7. Volume**

- Using "Volume Control+" to control volume which you need, the initial setting is level 12, and the MAX volume is level 15.

**8. Vibrato**

- Press "Vibro" to start this function, and press it again, function stopped.

**9. Sustain**

- Press "Sustain" to start this function, and press it again, function stopped.

**10. Drum kit**

- Press "Drum Kit", all the sounds will change into percussion sound, and stop it when you press it again.

**11. Single/fingered chord**

- Press "Single" button, LED display "ON" to enter single/fingered mode, then press "RHY+" button, LED display "000", press "Single" button to start single chord, LED display "001", or press "Fingered" button to start fingered chord, LED display "002", user can play 14 white keys and 10 black keys on the bass. (6 keys can choose 5 white keys and 3 black keys in the bass) Press "RHY+" button to stop.
- User can choose different rhythm with single/fingered.

**12. Tempo**

- Press "Tempo" and "Tempo Control+" to turn up and slow down the tempo.

**13. Metronome**

- Metronome function control, press twice, function stop.

**14. Sleep function**

- If it will enter into auto stand-by and sleep mode if there is no action after 15min, press any key can wake up it.

**15. LED indicator**

- Red LED light is power indicator. Press "ON" button to light on the power indicator and display screen, LED indicator also light on under sleep mode. Press "OFF" button, red indicator and display screen light off.
- Green LED light is charging indicator. connect USB V adapter to power the built-in lithium battery when the battery is lack of power. When green indicator light off it means the battery is fully charged.
- Only for modes without power indicator.

**16. Power display indicator**

- There are total 4 grade power display indicators, when power reduce, the indicator will turn off, when the power less of 3.3V, the LED indicator on left will flash, the piano need to be powered.
- This entry suit for the modes which with Power display indicator.

**17. Reset**

- Press "Reset" button, the piano will return to the default mode.

**18. Trans**

- There are 5 levels both for Flats and sharps, press "Trans" to choose, the LED will shows: -5, -4, -3, -2, -1, 0, +1, +2, +3, +4, +5 total 11 levels.

**19. Bluetooth function**

- The Bluetooth function opens automatically and has a hint. Bluetooth has started waiting for a phone to play accompanied or music. The mobile phone search to Nokia/Mandarin for connection. After the connection is successful, there is a hint, volume addition or music selection needs to be carried out on the mobile phone. (only applicable for Bluetooth auto version)

**20. Bluetooth MIDI Function**

- Can connect with the piano learning APP in iPhone or iPad through bluetooth, GarageBand, Perfect Piano and another professional APP. Specific connection method (Take GarageBand as an example) download GarageBand in iPhone or iPad, open it, select the "setting" on the top right into the column to select "Advanced", select the bluetooth MIDI device, then select "KonaX midi" in bluetooth MIDI device, click "connect" then can use. (Please re-start the roll up piano if can not connect). (Only applicable for bluetooth MIDI version)

**IV Accessory one: lists of tone**

Tone Number	Name	Tone Number	Name
T00	Piano 1	T35	Fretless Bass
T01	Piano 2	T36	Slap Bass 2
T02	Piano 3	T37	Slap Bass 1
T03	Honky-Tonk Piano	T38	Synth Bass 1
T04	Rhodes Piano	T39	Synth Bass 2
T05	Chorused Piano	T40	Violin
T06	Harpsichord	T41	Viola
T07	Clarinete	T42	Cello
T08	Celesta	T43	Contrabass
T09	Glockenspiel	T44	Tremolo Strings
T10	Music Box	T45	Pizzicato Strings
T11	Vibraphone	T46	Orchestral Harp
T12	Marimba	T47	Timpani
T13	Xylophone	T48	String Ensemble 1
T14	Tubular Bells	T49	String Ensemble 2
T15	Santur	T50	SynthStrings 1
T16	Hammond Organ	T51	SynthStrings 2
T17	Percussive Organ	T52	Choir Aahs
T18	Rock Organ	T53	Voice Oohs
T19	Church Organ	T54	Synth Voice
T20	Reed Organ	T55	Orchestra Hit
T21	Accordion	T56	Trumpet
T22	Harmonica	T57	Trombone
T23	Banjo	T58	Tuba
T24	Acoustic Guitar (nylon)	T59	Muted Trumpet
T25	Acoustic Guitar (steel)	T60	French Horn
T26	Electric Guitar (jazz)	T61	Brass Section
T27	Electric Guitar (clean)	T62	Synth Brass 1
T28	Electric Guitar (muted)	T63	Synth Brass 2
T29	Overdriven Guitar	T64	Soprano Sax
T30	Distortion Guitar	T65	Alto Sax
T31	Guitar Harmonics	T66	Tenor Sax
T32	Acoustic Bass	T67	Bariitone Sax
T33	Electric Bass (finger)	T68	Oboe
T34	Electric Bass (pick)	T69	English Horn

Tone Number	Name	Tone Number	Name
T70	Bassoon	T89	FX 4 (atmosphere)
T71	Clarinet	T90	FX 5 (brightness)
T72	Piccilo	T91	FX 6 (bellows)
T73	Flute	T92	FX 7 (echoes)
T74	Recorder	T93	FX 8 (sci-fi)
T75	Pan Flute	T94	Sitar
T76	Bottle Blow	T95	Banjo
T77	Skakuhachi	T96	Shamisen
T78	Whistle	T97	Koto
T79	Ocarina	T98	Alimba
T80	Lead 1 (square)	T99	Balgpipe
T81	Lead 2 (sawtooth)	T100	Fiddle
T82	Lead 3 (collage lead)	T101	Shenai
T83	Lead 4 (chiff lead)	T102	Tanba Bai
T84	Lead 5 (charang)	T103	Agogo
T85	Lead 6 (voice)	T104	Steel Drums
T86	Lead 7 (riffs)	T105	Woodblock
T87	Lead 8 (bass+lead)	T106	Taihu Drum
T88	Pad 1 (new age)	T107	Melodic Tom
T89	Pad 2 (warm)	T108	Synth Drum
T90	Pad 3 (polysynth)	T109	Reverse Cymbal
T91	Pad 4 (chour)	T120	Guitar Fret Noise
T92	Pad 5 (bowed)	T121	Breath Noise
T93	Pad 6 (metallic)	T122	Seashore
T94	Pad 7 (halo)	T123	Bird Tweet
T95	Pad 8 (sweep)	T124	Telephone Ring
T96	FX 1 (rain)	T125	Helicopter
T97	FX 2 (soundtrack)	T126	Applause
T98	FX 3 (crystal)	T127	Gun shot

**V Accessory two: lists of rhythm**

Rhythm Number	Name	Rhythm Number	Name
R000	Beguneswing	R035	Country1ET
R001	Begune1	R036	Tango1
R002	Begune2	R037	Tango2
R003	Pop1	R038	Polka 1
R004	Pop	R039	Polka 2
R005	Popplay	R040	Popswing
R006	Bosnova	R041	Easyswing
R007	Disco 1	R042	Softswing
R008	Disco 2	R043	Rock 1
R009	Bluesgrassdisco	R044	Rock 2
R010	Waltz1 1	R045	Rock 3
R011	Waltz 2	R046	Airyoock
R012	TwoBallswaltz	R047	Heartrock
R013	Bassawaltz	R048	Rock&roll
R014	Easyswaltz	R049	Urban
R015	Shufflewaltz	R050	Ballad
R016	Reggaewaltz	R051	Jazzballad
R017	Rhumbawaltz	R052	C Ballad
R018	March 1	R053	42 Ballad
R019	March 2	R054	65lowballad
R020	Rhumba1	R055	Planetballad
R021	Rhumba2	R056	50Ballad
R022	Slow	R057	Snakebase
R023	Slow2	R058	Happylolues
R024	Discocha	R059	Oldblues
R025	Guaracha	R060	Bluesgrass
R026	Chart	R061	Boogie1
R027	Samba1	R062	Boogie2
R028	Samba2	R063	Boogie3
R029	Ubbimimai	R064	Shuffle 1
R030	BB1	R065	Shuffle 2
R031	BB2	R066	Drum&shuffle
R032	16B1	R067	Countryshuffle
R033	16B2	R068	Quickshuffle
R034	Ballad1ET	R069	Reggaeshuffle

Rhythm Number	Name	Rhythm Number	Name
R070	RAB	R099	Thevillage
R071	1Reggaepulse	R100	Countryshuffle
R072	Regga1	R101	Electrickeys
R073	Regga2	R102	Dankkeys
R074	Salsa1	R103	Easysalk
R075	Salsa2	R104	Destiny
R076	Salsa3	R105	Comedy
R077	Tango 1	R106	Drive
R078	Tango 2	R107	Liquidnova
R079	Funky 1	R108	Kindustrialfolk
R080	Funky 2	R109	Slowpura
R081	Dixie 1	R110	SimpleJam
R082	Dixie 2	R111	Synthethix
R083	Foxtrot 1	R112	Fuel
R084	Foxtrot 2	R113	Accelerate
R085	R.roll 1	R114	Beachnight
R086	R.roll 2	R115	Irish
R087	Fastbeat	R116	Bambolla
R088	Quickbeat	R117	Bighand
R089	Smoothbeat	R118	Dandud
R090	Squarebeat	R119	Fusion
R091	Eurobeat	R120	House
R092	Alphadance	R121	Karion
R093	Bebadance	R122	Latin
R094	Dreadadance	R123	Mambo
R095	Dance1	R124	Newage
R096	Dance2	R125	Stowaz
R097	Dance3	R126	Soul
R098	Rap	R127	Teat

**VI Accessory three: name lists of demo**

Demo Number	Name	Demo Number	Name
D00	Lily mid	D07	Milk Song
D01	Winter Sonata	D08	Childhood Memory
D02	Kiyomi, Cutie Song	D09	Come into my dream
D03	Beautiful Jazz	D10	Valin Humoresque
D04	Forest Mist-Neptun	D11	Snowdrifts
D05	Destiny	D12	Dance of fireflie
D06	Poety of the Bird	D13	My Soul

**VII Maintenance of hand-roll piano**

1. The hand-roll piano can be clean with soft and clean towel.
2. It should be rolled well after use.
3. Do not put the piano in hot and humid place.

**VIII Instruction for the use of hand-roll piano**

- When using the piano, it should be put in flat place, and do not move it during playing or the normal function may be effected and damaged.
- The piano cannot be rolled too tight when putting it away, in case the normal function of the key is damaged and the product life is shortened.
- Do not pull or twist the keyboard of the piano.
- Do not put the piano in the hot and humid place.
- Cannot spit any part of the piano.
- Cannot put the piano in the place with strong wave, in case some function is damaged.

**IX Trouble shooting**

- If the sound is abnormal or the piano key is invalid, please press  $\Phi$  to turn off, then press  $\Phi$  again to restore the original setting.